

## **Microwave FAQ's**

**I keep trying to cook popcorn in my DCM, and it burns badly on the bottom. What could be the problem?** In the DCM, the turntable is metal, which can conduct energy and is the culprit of burning popcorn. Place a 9-10" glass pie dish (must be microwave safe – check manufacturer's recommendation), turned upside down in the center of the turntable, and place the popcorn on top. Please reference your Use & Care manual.

**I used the sensor mode for a baked potato in my microwave, and it was still hard in the center. How can I get it to cook through?** After you pierce the potato, place it on a paper towel-lined turntable. Press the sensor mode and cook. After cooking, remove from oven, wrap in aluminum foil and let stand 5-10 minutes. For more information, please refer to your Use & Care manual.