



User Manual

Modernist® Island (Ceiling Mount) Range Hood DHD36M967IM, DHD36M967IS, DHD48M977IM, DHD48M977IS

Table of Contents

Important Safety Instructions.....	1
Parts of the Hood	2
Operation	2
Care and Cleaning.....	4
Troubleshooting	5
Warranty.....	6
Warranty Card.....	Back Cover



To Our Valued Customer:

Congratulations on your purchase of the very latest in Dacor® products! Our unique combination of features, style, and performance make us a great addition to your home.

To familiarize yourself with the controls, functions, and full potential of your new Dacor island hood, read this manual thoroughly, starting at the **Important Safety Instructions** (Pg. 1).

Dacor appliances are designed and manufactured with quality and pride, while working within the framework of our company values. Should you ever have an issue with your island hood, first consult **Troubleshooting** (Pg. 5), which gives suggestions and remedies that may pre-empt a service call.

Customer input helps us improve our products and services, so feel free to contact our Customer Assurance Team for assistance with all your product-support needs.

Dacor Customer Assurance

14425 Clark Avenue
City of Industry, CA 91745

Telephone: 833-35-ELITE (833-353-5483) USA, Canada

Fax: (626) 403-3130

Hours of Operation: Mon – Fri, 5:00 a.m. to 5:00 p.m. Pacific Time

Website: www.dacor.com/customer-care/contact-us

Thanks for choosing Dacor for your home. We are a company built by families for families, and we are dedicated to serving yours. We are confident that your new Dacor island hood will deliver top-level performance and enjoyment for decades to come.

Sincerely,

The Dacor Customer Assurance Team

IMPORTANT SAFETY INSTRUCTIONS

Installer

Leave these instructions with the owner.

Consumer

Read this manual completely before using the hood. Save this manual for personal/professional reference.

For warranty information, see Pg. 6.

If you have questions/issues you cannot resolve, call Dacor Customer Assurance. (See the previous page for contact info.) When you call, have available the hood model/serial numbers, which are inside the chassis on the right-hand side. Remove the filters to view the labels, and record the numbers here for convenience:

IMPORTANT PRODUCT INFORMATION	
Model Number	
Serial Number	
Purchase Date	

Safety Symbols and Labels

The Important Safety Instructions and warnings in this manual cannot cover all possible situations. Use common sense and caution when maintaining/operating the hood.

DANGER

Immediate hazards that WILL cause severe injury or death.

WARNING

Hazards/unsafe practices that MAY cause severe injury or death.

CAUTION

Hazards/unsafe practices that COULD cause minor injury or property damage.

CALIFORNIA PROP 65 WARNING

This product contains one or more chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

General Safety Precautions

To reduce risk of fire, electric shock, and serious injury/death when using the hood, follow basic safety precautions, including:


WARNING

- Use the hood only as directed in this manual.
- Before service/cleaning, turn power off at the service panel, and lock out the panel so power cannot be switched on. If lockout is impossible, fasten a prominent warning notice to the panel.
- To avoid explosion/fire, do not store or use flammable/explosive vapors, liquids, material (ex: gasoline, aerosols) in/on/near the hood.
- Install/repair/replace hood parts only as directed in this manual. A qualified technician should perform all other service.
- DO NOT vent harmful/explosive vapors through the hood.
- Do not tamper with the hood controls.
- Do not let cigarettes, napkins, etc. be sucked into the hood.
- If the cooking unit is near a window, do not hang window coverings that could blow onto the appliances.
- Always run the hood when using the cooktop.
- Do not leave children/pets alone near an active cooking unit/hood or let them sit/stand on/play with these appliances; do not store items of interest to children near these appliances.
- Minimum distance between cooking surface and hood bottom is 26" (66.0 cm); this distance may increase depending on the cooking unit; see the cooking unit Installation Instructions for specific dimensions.
- To reduce risk of grease fire:
 - always monitor pots at high settings (boilovers cause smoke, and greasy spill-overs may ignite);
 - heat oils on low/medium settings.
 - clean fans/filters regularly so grease does not collect on them.
 - always use a burner nearest the cookware size.
- IN CASE OF GREASE FIRE:
 - cover flames with a close-fitting lid or metal sheet pan/tray, then turn off the burner. If flames do not die immediately, EVACUATE THE BUILDING, AND CALL THE FIRE DEPARTMENT.
 - NEVER PICK UP A FLAMING PAN.
 - DO NOT DOWSE FLAMES WITH WATER (incl. wet dish towels).
 - use only a Class ABC fire extinguisher and ONLY if:
 - ◆ the fire is small and contained in its area of origin
 - ◆ the fire department is being called
 - ◆ you can fight the fire with your back to an exit.

READ AND SAVE THESE INSTRUCTIONS

PARTS OF THE HOOD

48" Model Shown

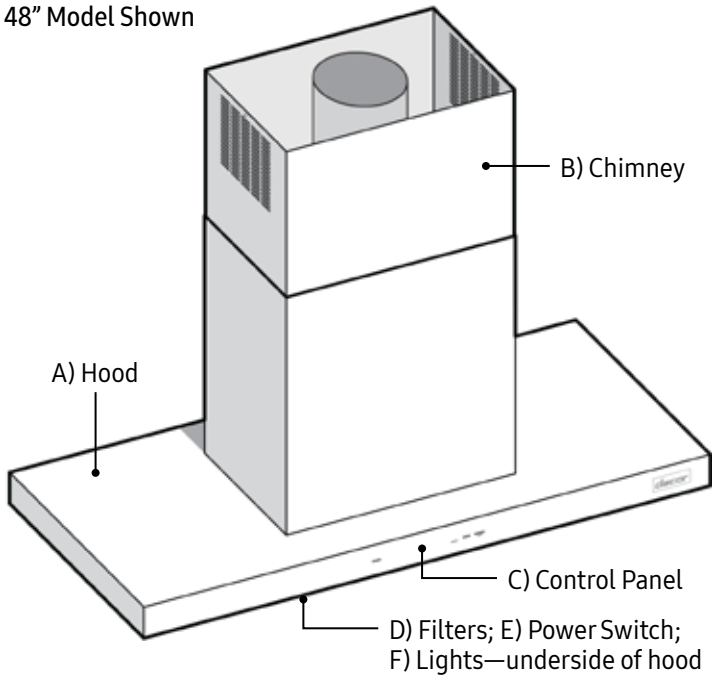

HOOD FEATURES		
Callout	Name	Description
A	Hood	Fans (36": 1, 48": 2) heat/smoke/fumes are drawn through filters up chimney duct to outdoors; access filters, lights, power switch via underside of hood.
B	Chimney	Conceals exhaust ducting, internal mechanisms
C	Control Panel	Various keys control hood operations
D	Filters	Baffle filters: keep grease out of fans (DHD36: 2 filters; DHD48: 3 filters).
E	Power Switch	Turns on/off hood lights and fans; inside the hood chassis; remove filters for access.
F	Lights	7.5W LED, dimmable (36": 4 lights; 48": 6 lights).

OPERATION

WARNING

Run the hood only with the filters installed. To avoid personal injury, fire, or hood damage, clean the filters regularly.

Using the Hood Control Panel

Control fan speed, lights, ConnectOn™, and timer by tapping the illuminated white keys on the control panel.



Using the Fan

Fan speed is indicated by which word (Low, Medium, High, Boost) appears on the control panel.

1. (Control panel) Tap **Power**.
The fan comes on at the Low speed.
2. Tap another fan speed to change the speed.
3. Tap **Power** to turn the fan off.

Using the Fan Timer

Each time you tap Timer, the setting increases by 10 minutes to a maximum of 99 minutes.

1. (Control panel) Tap **Timer** until you reach the desired setting.
The readout shows the countdown; the fan turns off when the timer reaches 00.
2. (To manually stop the timer) Tap-hold **Timer** for 3 seconds.

Using the Lights

1. (Control panel) Tap **Light**.
The lights come on at the High setting.
2. Tap **Light** again.
The lights dim.
3. Tap **Light** a third time.
The lights turn off.

OPERATION

Using the Hood Control Panel, cont.

Muting/Unmuting the Hood-Status Beep

When you tap control-panel features, and when the timer finishes counting down, a beep sounds by default. You may mute/unmute the beep.

1. Tap-hold **Light** for 3 seconds.
The status indicator (beep) is muted.
2. Tap-hold **Light** again for 3 seconds to unmute the beep.

About the Auto-ON Safety Feature

To protect its electronics, the fan turns itself ON if Auto-ON is enabled or if the hood is paired via Bluetooth with a Dacor cooktop and the cooktop is on. Fan speed increases with the heat.

- Tap **POWER** to manually turn off the fan.
- To temporarily turn off Auto-On, tap **POWER**, or change the fan speed. (**Auto** goes out.)

About ConnectOn™

First, set up the corresponding feature on your compatible Dacor cooktop, which can be paired via Bluetooth with the hood, and you can use the Dacor iQ Kitchen app downloaded to a mobile device to monitor and control the hood's On/Off status, fan speed and lights, and set the shut-off timer with the time's-up alarm.

To download the Dacor iQ Kitchen app, visit the app store, and search for **Dacor iQ Kitchen**. To view the app's instruction manual, visit www.dacor.com, and search for **Dacor iQ Kitchen**.

Setting Up/Using ConnectOn

1. (Control panel) Tap-hold **ConnectOn** for 3 seconds.
Pairing activates; the Bluetooth indicator (⌘) blinks.
2. Tap the Bluetooth icon on the Dacor cooking unit.
The hood and cooking unit are paired. (For details on pairing, see the related section in the cooking unit's User Manual.)
3. Tap-hold the hood's Bluetooth indicator for 3 seconds.
The hood and cook unit are unpaired.
4. (Control panel) Tap **ConnectOn**, and turn on the cooking unit.
The hood activates.

Important Operating Tips

- Always turn on the hood when cooking.
- Turn the hood on shortly before cooking to create airflow in the room.
- Adjust fan speed to the volume/weight of food being cooked.
- Shut nearby windows/doors, turn off ceiling fans, and close nearby heating/AC vents to reduce airflow conflicts in the room.
- Place the largest cookware on rear burners if possible.
- Heat oils/fats slowly.

CARE AND CLEANING

Cleaning the Hood

WARNING

- Before cleaning, turn off power to the hood.
- Clean the hood only as directed in this manual.
- Wait until the hood and cooking unit are safe to touch before cleaning.

CAUTION

- Always wipe stainless-steel with the grain.
- Do not use abrasive cleaners/scrubbers on stainless steel or glass.
- To avoid damaging the fans, do not reinstall damaged filters.

- For best function/appearance, clean the hood regularly.
- Vary the cleaning cycle with the type/volume of cooking.
- Clean soiled parts as soon after use as possible.

Cleaning Stainless Steel/Painted Surfaces


- Clean stainless steel and painted surfaces with a mild solution of dish soap and warm water, always wiping with the grain. (For best results, use the provided stainless-steel cleaner; contact Dacor Customer Assurance to order new cleaner; see inside front cover for contact information).
- Do not clean with abrasive cleaners or abrasive cloths.
- Rinse and dry with a micro-fiber or other soft, lint-free cloth.

Cleaning the Light-Bulb Cover

Wipe the bulb cover with a mild glass cleaner.

Cleaning the Filters

Clean the filters at least bi-monthly. The filters are dishwasher-safe or hand washable in hot water/dish soap. Ensure the filters dry completely before reinstalling them.

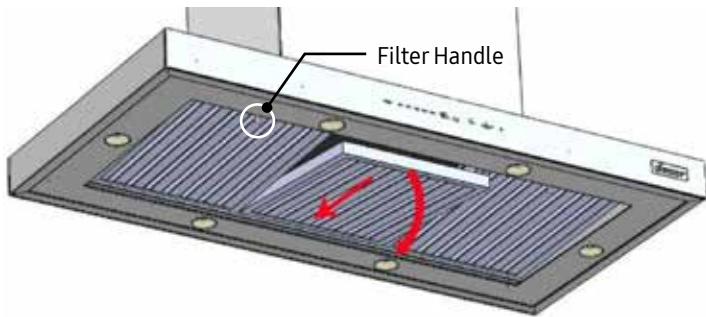

Removing/Reinstalling the Filters

1. Grasp the knob at the front of the filter, and push rearward.
2. When the front of the filter clears the front slot, tilt the filter downward, and pull it away from the chassis.
3. With the filter knob in front, grasp the knob, and insert the tabs on the back of the filter into the slot at the back of the hood.
4. Push the filter into the slot so the front clears the rim of the hood and aligns with the forward slot, then let the tension bring the filter forward so it engages the front slot.

Maintaining the Hood


Replacing the Light Bulbs

The owner performs this task.


WARNING

Use bulbs no stronger than 7.5W LED, and to avoid malfunction, use only dimmable bulbs. (See ordering info below and on inside front cover.)

1. Turn off power to the hood at the source, and ensure all appliance surfaces are cool to the touch.
2. Wipe the light-bulb face (to provide a clean, dry surface), then press the provided suction cup onto the bulb.

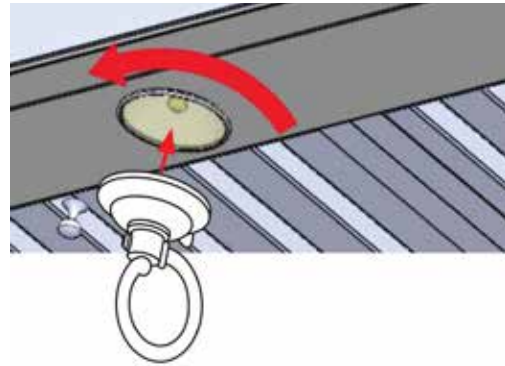

3. Twist the suction cup counter-clockwise to loosen the bulb, pull it from the socket, remove the suction cup, and discard the bulb.
4. Press the suction cup onto the replacement bulb.
5. Orient the bulb prongs to the wide ends of the socket slots, insert the prongs in the slots, and twist clockwise to engage the bulb.

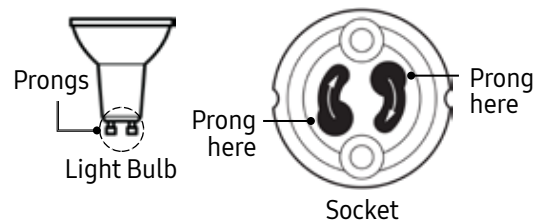

NOTE: If the bulb does not engage, ensure its prongs are oriented properly (previous graphic), and repeat Step 5.

6. Remove the suction cup, and turn hood power ON at the source.

Ordering Replacement Bulbs and Filters

Call Dacor Customer Assurance (see inside front cover for contact information) for component replacement questions/details.

Part #	Description
703580	Dimmable-LED-Bulb Replacement Kit (1 bulb, 1 suction cup)

Use the information in this table to order filters for the Modernist DHD island hood:

Model #	Description
AWHBF3/4	Baffle filter: 36" (2 filters); 48" (3 filters)

TROUBLESHOOTING

Issue	Possible Cause	Solution
<ul style="list-style-type: none"> • Nothing works (control panel not on; blower system not working) • Lights not working; control panel not on • Fan not working; control panel not on 	No power to hood	Reset circuit breaker, or replace blown fuse.
	Hood main power switch is off	Turn on hood main power switch (see Pg. 2 for location).
	Power outage	Call electric company.
	Hood disconnected from power supply	Have qualified electrician connect hood to electric power.
Lights not working; control panel on	Dead bulb	Replace bulb. (See inside front cover and Pg. 4).
Fan not drawing heat/smoke properly	Fan set to Low	See Operation > Using the Fan , Pg. 2.
	Filter(s) clogged/dirty	Ensure filters are clean/unclogged.
	Damper jammed/duct clogged	Consult qualified installation technician.*
Fan comes on by itself	Hood's Auto-On feature is active	Fan turns itself on if Auto-On is enabled or if hood is connected via Bluetooth to a Dacor cooking unit, and cooktop is on; tap POWER to fan turn off manually.
Fan turns off by itself	Normal operation	Fan turns itself off after 4 hours continuous use.
Fan not working; control panel on	Fan malfunction	Call for service.
ConnectOn™ not working	Hood not paired with cooking unit	Only a Dacor-compatible cooking unit can be paired (connected) with hood (see About ConnectOn™ , Pg. 3).
<p>*Ducting from hood to outdoors is not manufactured/warranted/serviced by Dacor; the owner shall have qualified personnel install the hood and install/maintain the ducting; Dacor is not responsible for property damage/personal injury caused by faulty installation of hood or ductwork.</p>		

WARRANTY

Covered

Within the 50 states of the USA; Washington, DC; and Canada*

Full 2-Year Warranty	<p>The warranty applies only to the Dacor appliance sold to the first-use buyer, starting at the original purchase date or closing date of new construction, whichever period is longer. The warranty is valid on products purchased brand new from a Dacor Authorized Dealer or other Dacor authorized seller.</p> <p>If your Dacor product malfunctions within 2 years of the original purchase date due to material or manufacturing defect, Dacor will remedy it without charging you.</p> <p>All cosmetic damage (scratches, paint/porcelain blemishes, etc) to the unit or included accessories must be reported to Dacor within 60 days of the original purchase date to qualify for warranty coverage.</p>
----------------------	--

Coverage Limitations	<p>Service will be provided by a Dacor-designated service company during regular business hours. (These are independent providers and are not agents of Dacor.) These types of products carry a 1-year parts warranty only:</p> <ul style="list-style-type: none"> • Dealer-display and model-home-display products with a production date greater than 5 years • Products sold "As Is" • Products installed for non-residential use (religious organizations, fire stations, bed and breakfast, spas, etc). <p>The buyer shall pay all delivery, installation, labor, and other service fees. Warranty is null and void if the unit's ID numbers/tags are altered/defaced/missing. The buyer must provide proof of purchase or a closing statement for new construction upon request. All Dacor products must be accessible for service.</p>
----------------------	--

Outside the 50 States of the USA, District of Columbia, and Canada*

Limited 1st-Year Warranty	<p>If your Dacor unit malfunctions within 1 year of the original purchase date due to material or manufacturing defect, Dacor will furnish a new part, FOB factory**, to replace the defective part.</p> <p>The buyer shall pay all delivery, installation, labor, and other service fees.</p>
---------------------------	--

*Warranty is null and void if a non-UL-approved unit is transported from the US; **(Free On Board at the Factory) Title (responsibility for the unit) passes to the buyer when the goods leave Dacor's loading dock. Dacor pays the freight, but the buyer is responsible for claims against the product and for promptly notifying Dacor of missing parts/damage/shipping errors. (For details/clarification on the subject of FOB Factory, contact Dacor Customer Service at the toll-free number provided.)

Not Covered

- Slight color variations in painted parts and due to kitchen lighting, appliance location, etc.
- Service calls to teach the user how to care for the unit
- Travel fees to islands/remote areas (ferries, toll roads, etc)
- Consequential/incidental damage (lost food/medicine, lost work time, restaurant meals, etc)
- Product failure (due to improper installation or when unit is used for commercial, business, rental, or other non-residential use)
- Replacement of house fuses, fuse boxes, or resetting of circuit breakers)
- Product damage (caused by accident, fire, flood, power interruption, power surges, or other so-called "acts of God")
- Liability or responsibility for damage to surrounding property (cabinetry, floors, ceilings, and other structures/objects)
- Breakage, discoloration, or damage to glass, metal surfaces, plastic parts, trim, paint, or other cosmetic finish from improper use/abuse/care/neglect
- Consumable parts (ex: filters, light bulbs).

Out of Warranty

If a service issue arises beyond the standard warranty period, contact Dacor anyway. We review each issue individually to provide the best possible solution under the circumstances.

THE REMEDIES IN THE ABOVE EXPRESS WARRANTIES ARE THE SOLE, EXCLUSIVE REMEDIES; THUS, NO OTHER EXPRESS WARRANTIES ARE MADE, AND OUTSIDE THE 50 STATES OF THE USA; WASHINGTON, DC; AND CANADA, ALL IMPLIED WARRANTIES (INCL. BUT NOT LIMITED TO: ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR USE/PURPOSE) ARE LIMITED TO 1 YEAR FROM THE ORIGINAL PURCHASE DATE. NEVER SHALL DACOR BE LIABLE FOR INCIDENTAL EXPENSE OR CONSEQUENTIAL DAMAGES. SHOULD DACOR PREVAIL IN ANY LAWSUIT, DACOR SHALL BE ENTITLED TO REIMBURSEMENT OF ALL COSTS AND EXPENSES (INCL. ATTORNEY FEES) FROM THE DACOR CUSTOMER. NO WARRANTIES, EXPRESS OR IMPLIED, ARE MADE TO ANY BUYER FOR RESALE.

Some states do not limit implied warranty length or do not exclude/limit inconsequential damages; thus, the above exclusions/limitations may not apply to you. This warranty gives you specific legal rights. You may also have other/additional rights depending on your state of residence.


NOTES

NOTES

fold here



NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES



BUSINESS REPLY MAIL
FIRST-CLASS MAIL PERMIT NO 1600 CITY OF INDUSTRY CA

POSTAGE WILL BE PAID BY ADDRESSEE

**DACOR
ATTN WARRANTY PROCESSING DEPT
PO BOX 90070
CITY OF INDUSTRY CA 91715-9907**





Please visit www.dacor.com to activate your warranty online.

WARRANTY INFORMATION

**IMPORTANT:**

Your warranty will not be activated until you activate it online or return this form to Dacor. If you have purchased more than one Dacor product, please return all forms in one envelope, or activate the warranty online for each product.

Please be assured that Dacor will never sell your name or any information on this form for mailing-list purposes, as we do not consider it a proper way of expressing our gratitude for your having chosen Dacor products for your kitchen!

Owner Last Name (please print) _____ First _____ Middle Init. _____

Street _____

City _____ State _____ Zip _____

Purchase Date _____ Email _____ Phone _____

Dealer _____

City _____ State _____ Zip _____

Your willingness to take a few seconds to complete the section below will be sincerely appreciated. Thank you.

1. How were you first exposed to Dacor products? (Please check one.)

- A. T.V. Cooking Show
- B. Magazine
- C. Appliance Dealer Showroom
- D. Kitchen Dealer Showroom
- E. Home Show
- F. Builder
- G. Architect/Designer
- H. Another Dacor Owner
- I. Model Home
- J. Other _____

2. Where did you buy your Dacor appliances?

- A. Appliance Dealer
- B. Kitchen Dealer
- C. Builder Supplier
- D. Builder
- E. Other _____

3. For what purpose was the product purchased?

- A. Replacement only
- B. Part of a Remodel
- C. New Home
- D. Other _____

4. What is your household income?

- A. Under \$75,000
- B. \$75,000 – \$100,000
- C. \$100,000 – \$150,000
- D. \$150,000 – \$200,000
- E. \$200,000 – \$250,000
- F. Over \$250,000

5. What other brands of appliances do you have in your kitchen?

- A. Cooktop _____ C. Dishwasher _____
- B. Oven _____ D. Refrigerator _____

6. Would you buy or recommend another Dacor product?

- Yes
- No

Comments _____

Thank you very much for your assistance. The information you have provided will be extremely valuable in helping us plan for the future and in giving you the support you deserve.



cut here

cut here